

Convertible Bench Unit - 3 benches in 1

- Versatile bench unit perfect for auditorium and classroom seating
- Join two units together to create a configuration ideal for cafeteria/dining use
- Each bench seats between 4-6 children (depending on age)
- Laminated table top and bench with tough edging and MDF core (water resistant and easy clean)
- Choice of two heights (primary and secondary)
- Heavy duty locking castors
- 14 colours to choose from
- FIRA certified
- 16 year warranty on welds and mechanism






Classroom Configuration




Auditorium Configuration

Convertible Bench Unit	Code
685(h) x 2435(w) x 730mm (d)	9SLCB827
735(h) x 2435(w) x 730mm (d)	9SLCB829

Colour Option

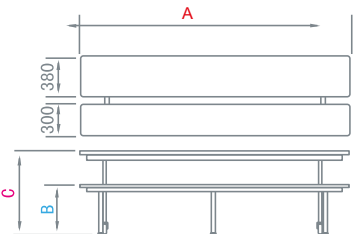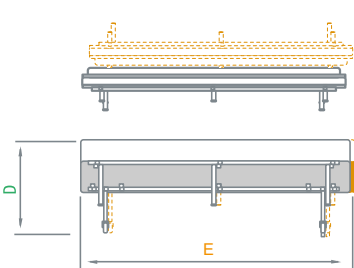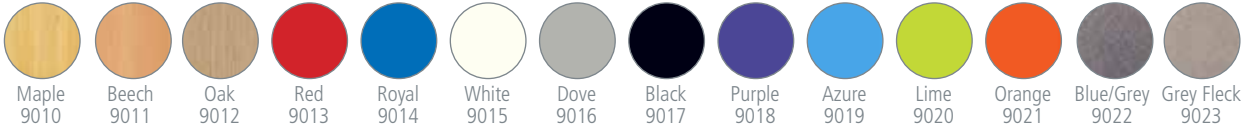

Table/Bench

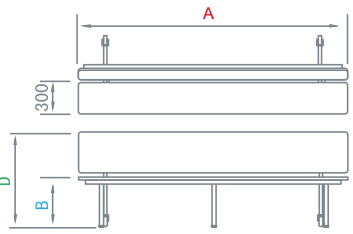

Bench with Back Rest

All sizes are in millimeters

	8ft - 27	8ft - 29
A	2435mm	2435mm
B	375mm	425mm
C	685mm	735mm
D	800mm	850mm
E	2485mm	2485mm

Convertible

Versatile in design, the bench unit is effectively three benches in one. Ideal for auditorium style seating, it can also be converted to a classroom table and then, by joining two units together, is perfect for dining use.



Cafeteria Configuration (when two units are joined)

Operating Instructions

Operating Instructions

In the interest of safety it is important that the operating instructions shown opposite are followed when deploying and storing the mobile folding tables.

Required Maintenance

To keep your tables operating to the optimum level, they must be checked on an ongoing basis as follows:

- Regularly inspect table operation for smoothness and general stability.
- Clean table tops according to current food service hygiene practices after each use. Exterior components of tables should be inspected for food deposits and cleaned as required. The underside of the tables should be inspected for chewing gum and other food deposits.
- Periodically you should lubricate tables with a food grade silicon spray, which is required to pivot joints. We recommend lubrication every six months or more often if indicated by stiff operation or noise.

CAUTION:- Excessive use of water during cleaning may cause corrosion



Folding Table Operating Instructions


Moving The Folding Table



With travel lock engaged push from the seats as shown.



Do **NOT** push the surface of the table.

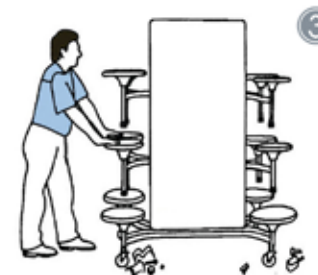

Avoid litter & obstacles on the floor.

Opening The Folding Table



With your left hand pushing down the travel lock, push apart the stool unit with your right hand on the middle stool.



Continue opening by pressing down with both hands on the middle stools.



Continue opening by pressing down with both hands on the centre stools.

Closing The Folding Table



Release locking bar by pressing down on the table surface, with right hand lift clear the lock.



Continue to lift using centre stools.



Using the middle stools push together to engage travel lock.